

## Supplementary instructions Interchangeable battery

This manual is valid in conjunction with the main operating manual Porky's Pick Up!

Discharge of battery during operation causes the LED display to move to the left. The battery must be recharged or replaced immediately as soon as the LED display turns yellow.

## 1. Changing the battery

Initially, turn key switch "Power" to "Off" position. Open plug connection as shown in picture (1) and pull the plug as shown in picture (2).

Remove the interchangeable battery attached to the rear as shown in picture (3).

Afterwards replace with fully charged battery pack and reconnect plug. The device is ready for operation after turning on the battery and control switch.

Attention!
First disconnect plug connection, then remove battery from holder!








## 2. Charging the battery

Establish plug connection as shown in picture (4) and connect AC voltage plug to 230 V AC power outlet. Charge symbols are depicted on the display during charging process and when recharging is completed. Time needed for recharging depends on the discharge state of battery. Remove the charging device by disconnecting the plug (picture 4).

In case of non-use of fully charged battery packs over a longer period (2 to 3 months) the charge level should be checked regularly. Recharge, if needed, to avoid deep discharging.



Only operate the unit with the rechargeable battery fully inserted into the holder!

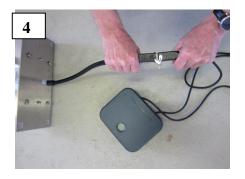

## ② Do you have any questions?

We will be happy to assist you. Please call us! Tel.: 05262 / 99399-0

MEIER-BRAKENBERG GmbH & Co. KG Brakenberg 29 ● 32699 Extertal

Tel: +49 (0) 5262 / 993 99-0 • Fax: +49 (0) 5262 / 993 993

E-Mail: info@meier-brakenberg.de Web: www.meier-brakenberg.de